

Product Data Sheet

Flat Cargo Mat

Instruction and safety information

Date of issue: 2024-12-05

Sheet No: 1/2024

Update:

SECTION 1 Company recognition

1.1. COMPANY:
Rezaw-Plast Ryszard Zawół
Ul Leśna 46
05-083 Zaborów
NIP: 529 001 04 16
REGON: 010585493

1.2. CONTACT DETAILS:
www: rezaw-plast.pl
e-mail: sklep@rezaw-plast.pl
tel.: (+48) 22 780 92 12

1.3. TRADEMARK:
logo:



Trademark ID: R.197408

logo:



Trademark ID: R.197409

SECTION 2 Product recognition

2.1. Product type:
FLAT CARGO MAT


2.2. Material:
HDPE High Density Polyethylene + TPE Thermoplastic Elastomer
standard color of product - black

2.3. Production recognition:
batch number - listed on the label

2.4. Product recognition:
label with article number on the product
products dedicated to specific vehicle models

2.5. Made in Poland

2.6. Product labelling and packaging example:

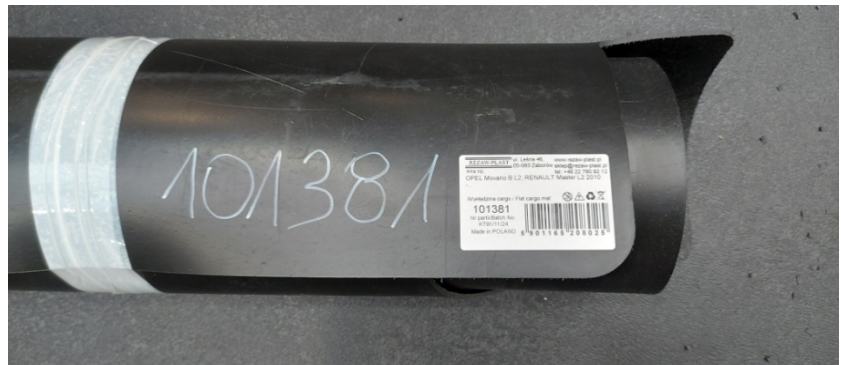




2.7. Warranty
2 years


2.8. Recycling:
fully recyclable







SECTION 3 Exploitation and maintenance

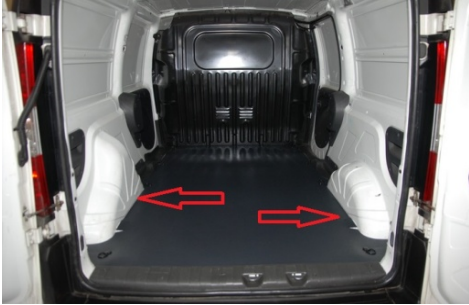
3.1.	Flat cargo mat provides protection for the load compartment of delivery vans.
3.2.  	Make sure to correctly choose the cargo mat for your car model.
3.3.	Do not attempt to modify the product as this may affect the intended use.
3.4. 	After receiving the rolled mat, we recommend leaving the cargo mat on the flat surface in room temperature for a few hours. This will allow the mat to return to its original shape and ensure optimum functionality. Install the cargo mat directly in the load compartment according to the instructions provided (Appendix 1)

Example of flat cargo mat placement in the load compartment



CAUTION!	
	To avoid the risk of suffocation, keep the plastic bags away from babies and children.
	To avoid accidental injuries, use caution while using any tools. To prevent injuries, do not expose children to sharp instruments.
	In case of visible damage or wear, replace the product with a new one.

<p>3.5. </p>	<p>We recommend cleaning the cargo carpet as follows:</p> <ol style="list-style-type: none"> 1. Remove dust and dirt with a Hoover. 2. Wash the cargo carpet with mild soap and warm or cold water, use a cloth to wipe.
---	---

<p>3.6. </p>	<p>If you have any questions, please contact our customer service team, we will provide the best and professional service.</p>
---	--

Appendix 1 (Self-assembly instructions for flat cargo mat)

Self-assembly instruction for flat cargo mat.

Necessary tools: lever, wheel spanner, wheel locking chocks, screwdriver, set of spanners or open-ended spanners.

⚠ Caution: Before attempting to install the flat cargo mat, make sure to wear protective goggles and gloves. Work safety rules and caution should be maintained during assembly operations due to the need to use workshop tools and assembly components.

⚠ Attention! Before the installation, the carpet should be laid out on a flat surface in a place not exposed to direct sunlight, in a room where the temperature is close to room temperature.

Step one: place the vehicle in a safe location and secure it to prevent any possibility of movement during the operation

The best place to set up your vehicle for the installation of the cargo mat in your car is the garage, the driveway in front of the garage or other safe place.

Once the vehicle is placed, the handbrake must be pulled and first gear must be engaged. On automatic transmissions, place the jack in position P. In addition, support the rear wheels on both sides. It is best to use special chocks for this.

Step two: install the cargo mat

Before installing the cargo mat, first match the carpet to the floor in the load compartment of the vehicle. If required, remove the plastic grilles, the thresholds at the rear and side doors and the fasteners for the load securing straps during transport.

Next, lay down the cargo mat on the floor of the vehicle's load compartment. Attach all previously removed elements.

If the car has a factory installed plywood floor, attach the cargo mat to it using a screwdriver and metal screws.

⚠ Caution: The fastening of the cargo mat should be stable and there should be no uncontrolled movement of the cargo mat.

Step three: Finish the installation of the cargo mat.

Remove all previously applied protection of the car and prepare it for safe usage.

Example of product labelling and packaging

